

z e n s

PuK Combi USB-C

Installation guide


Included items

- a PuK Combi USB-C
- b 2x USB-C cable
- c USB-C power adapter
- d Power adapter
- e Mounting set
- f Installation mold

Required tools (not included)

- g Jigsaw
- h Screw driver
- i Pencil or pen
- j Measuring tool


1

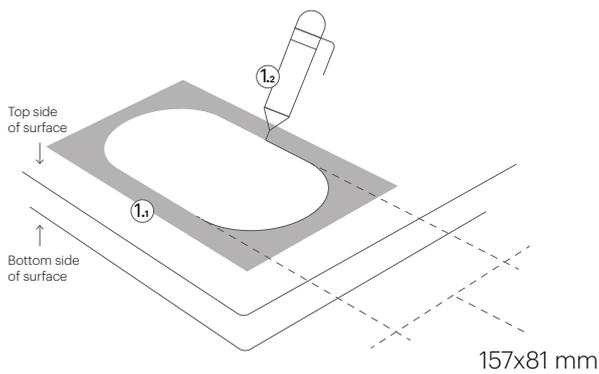

1.1 Position the mold on the top side of the surface.


1.2 Draw the shape to indicate the position of the PuK Combi USB-C.

2

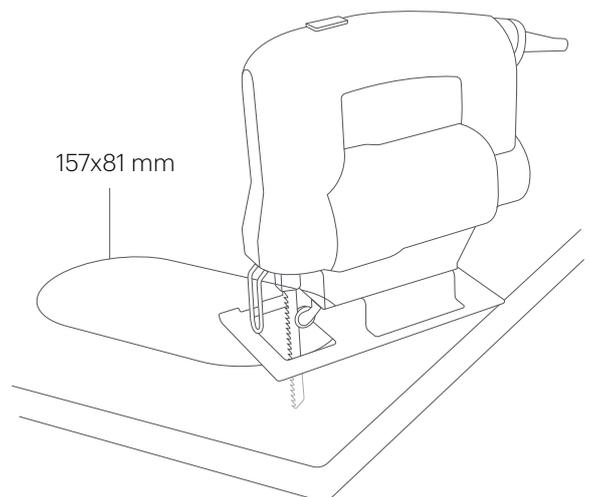


Use the jigsaw and follow the drawn lines to cut out the correct shape.

3

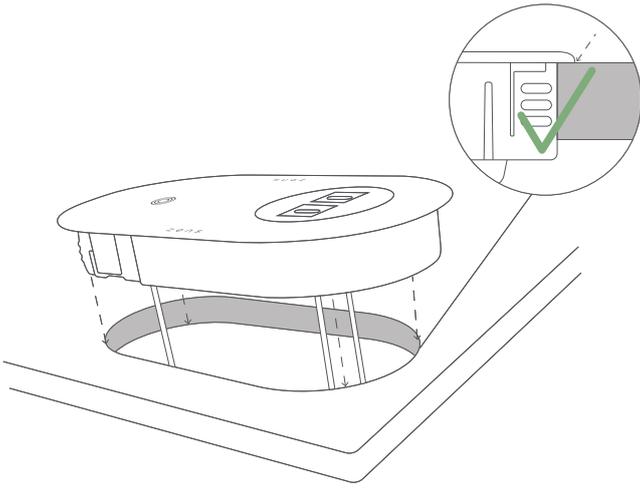


Insert the PuK Combi USB-C in the opening from above.
Important: leave no space between the product and the surface.

4

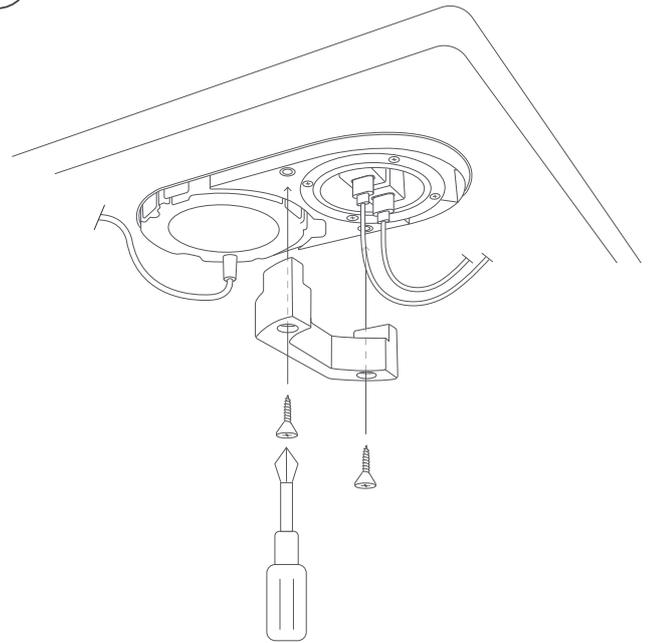


Use the two screws to fasten the bracket and secure the product.

5

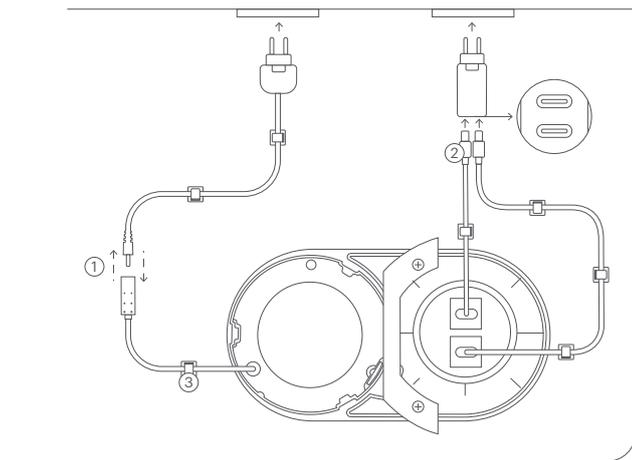

- ① Connect the cable to the power adapter and plug it into the nearest power socket.
- ② Connect the two USB-C cables to the power adapter and plug it in to the nearest power socket.
- ③ Use the cable clips to neatly secure the cables on the bottom of the surface.

6

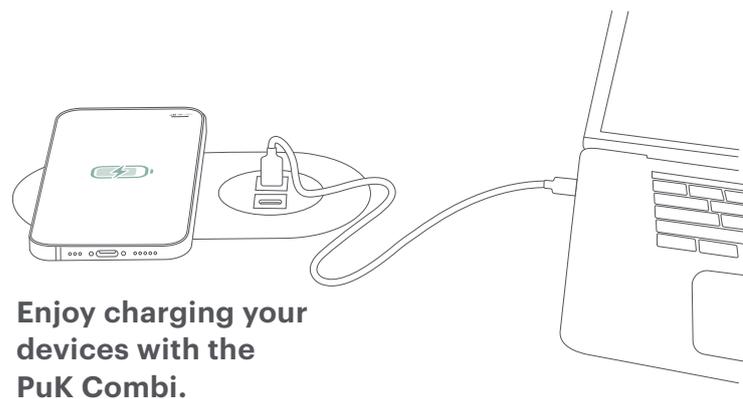

Enjoy charging your devices with the PuK Combi.